


神明北地区配置図

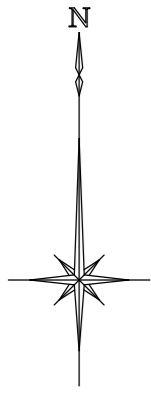

5 F	501 2LDK	502 1LDK		集会所				503 3DK	504 3LDK
4 F	401 2LDK	402 1LDK		403 1LDK	404 1LDK	405 2DK	406 2DK	407 3DK	408 3LDK
3 F	301 2LDK	302 1LDK		303 1LDK	304 1LDK	305 2DK	306 2DK	307 3DK	308 3LDK
2 F	201 2LDK	202 1LDK		203 1LDK	204 2DK	205 2DK	206 2DK	207 3DK	208 4DK
1 F	101 2LDK(ベ)	102 1LDK		103 1LDK	104 2DK	105 2DK	106 2DK(ベ)	107 3DK(ベ)	108 4DK(ベ)

集合住宅断面図

